



INSTALLATION GUIDE


STANDARD METAL




Fastening



The fastener's washer should be firmly compressed against the metal, but not over-driven, which can ruin the washer and rubber, causing leaks.

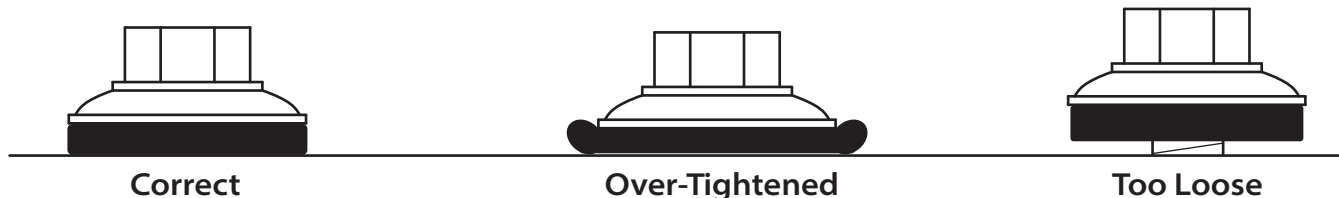

Fasteners should be fastened in the flat next to each rib as shown below.

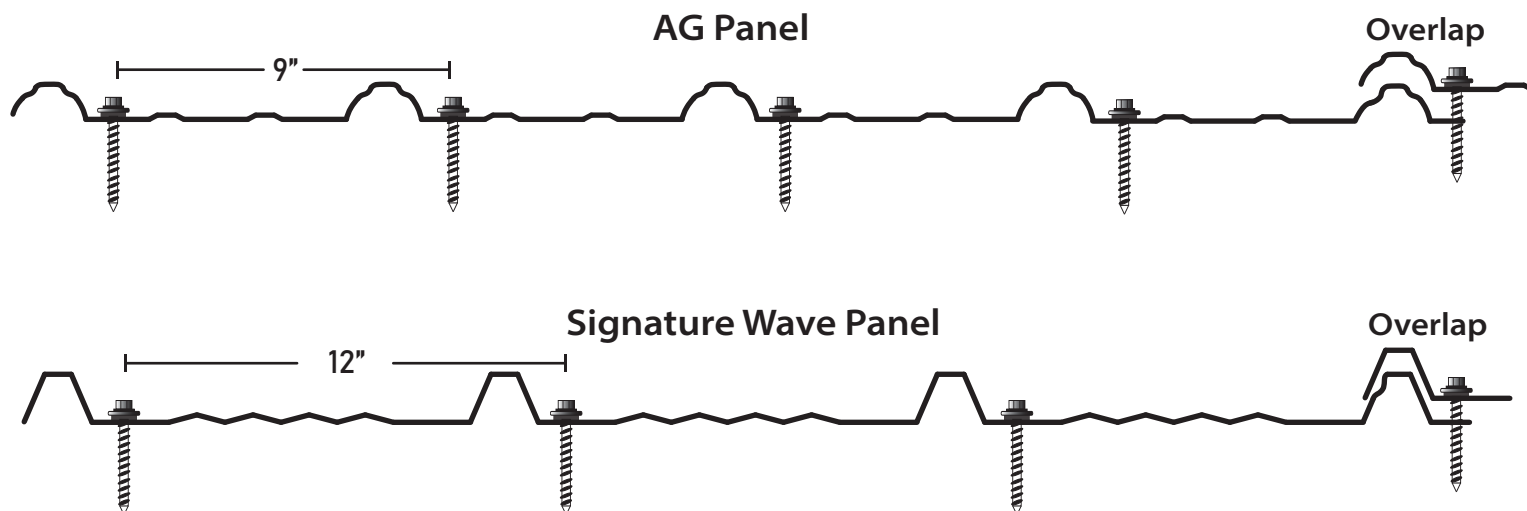


Siphon Groove


Our AG Panel and Signature Wave Panel both have anti-siphon grooves on the underlapping rib. When the overlapping rib is properly installed over the underlapping rib, the anti-siphon groove creates an airgap, preventing water from wicking over the rib and causing leaks.




Standard Wall & Roof Detail

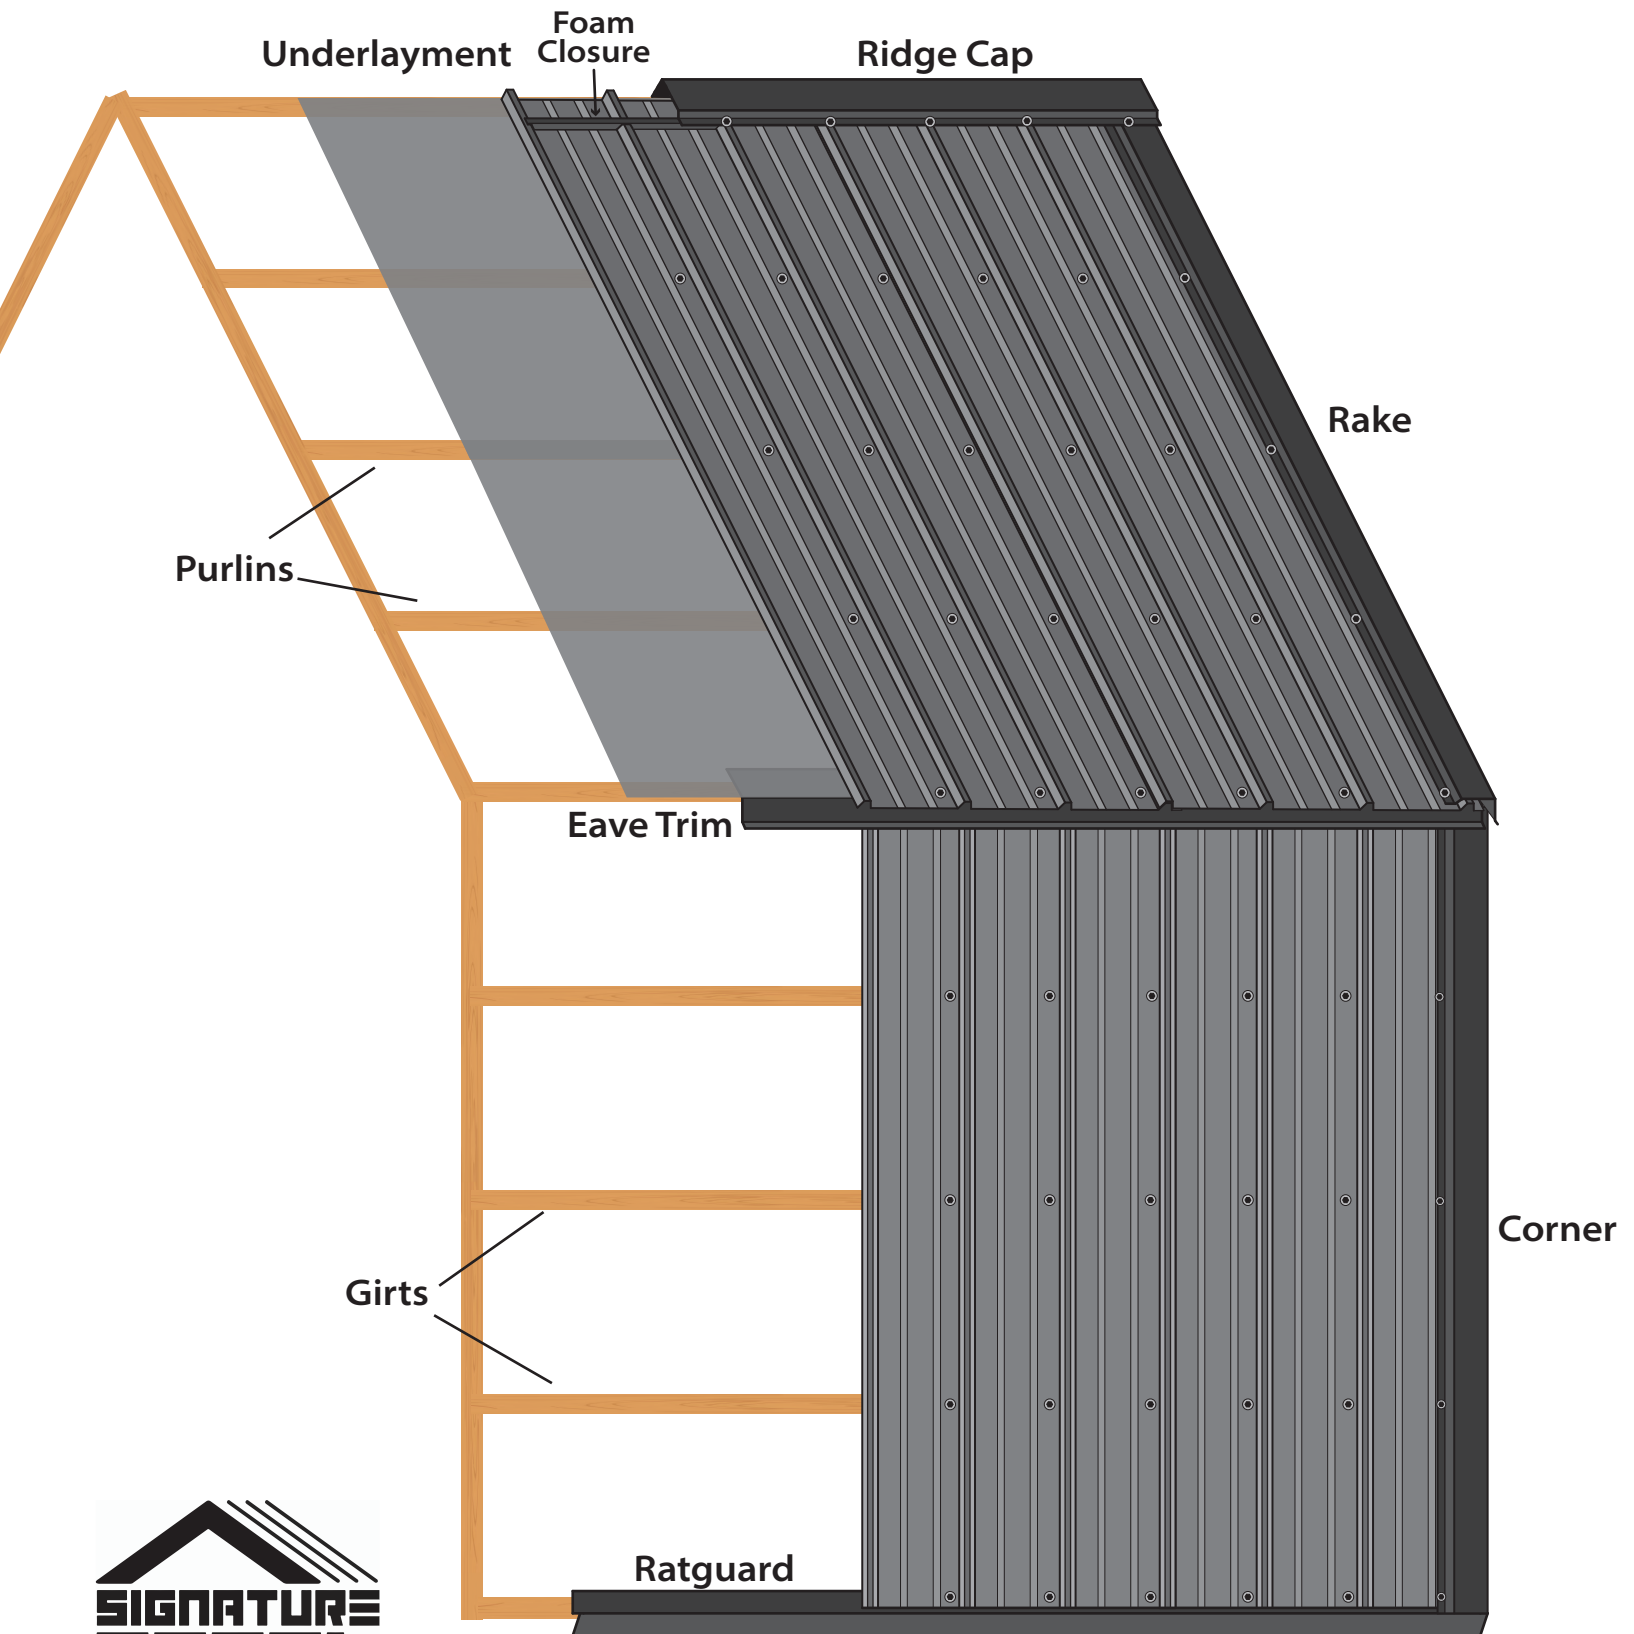



Fascia / Soffit Detail

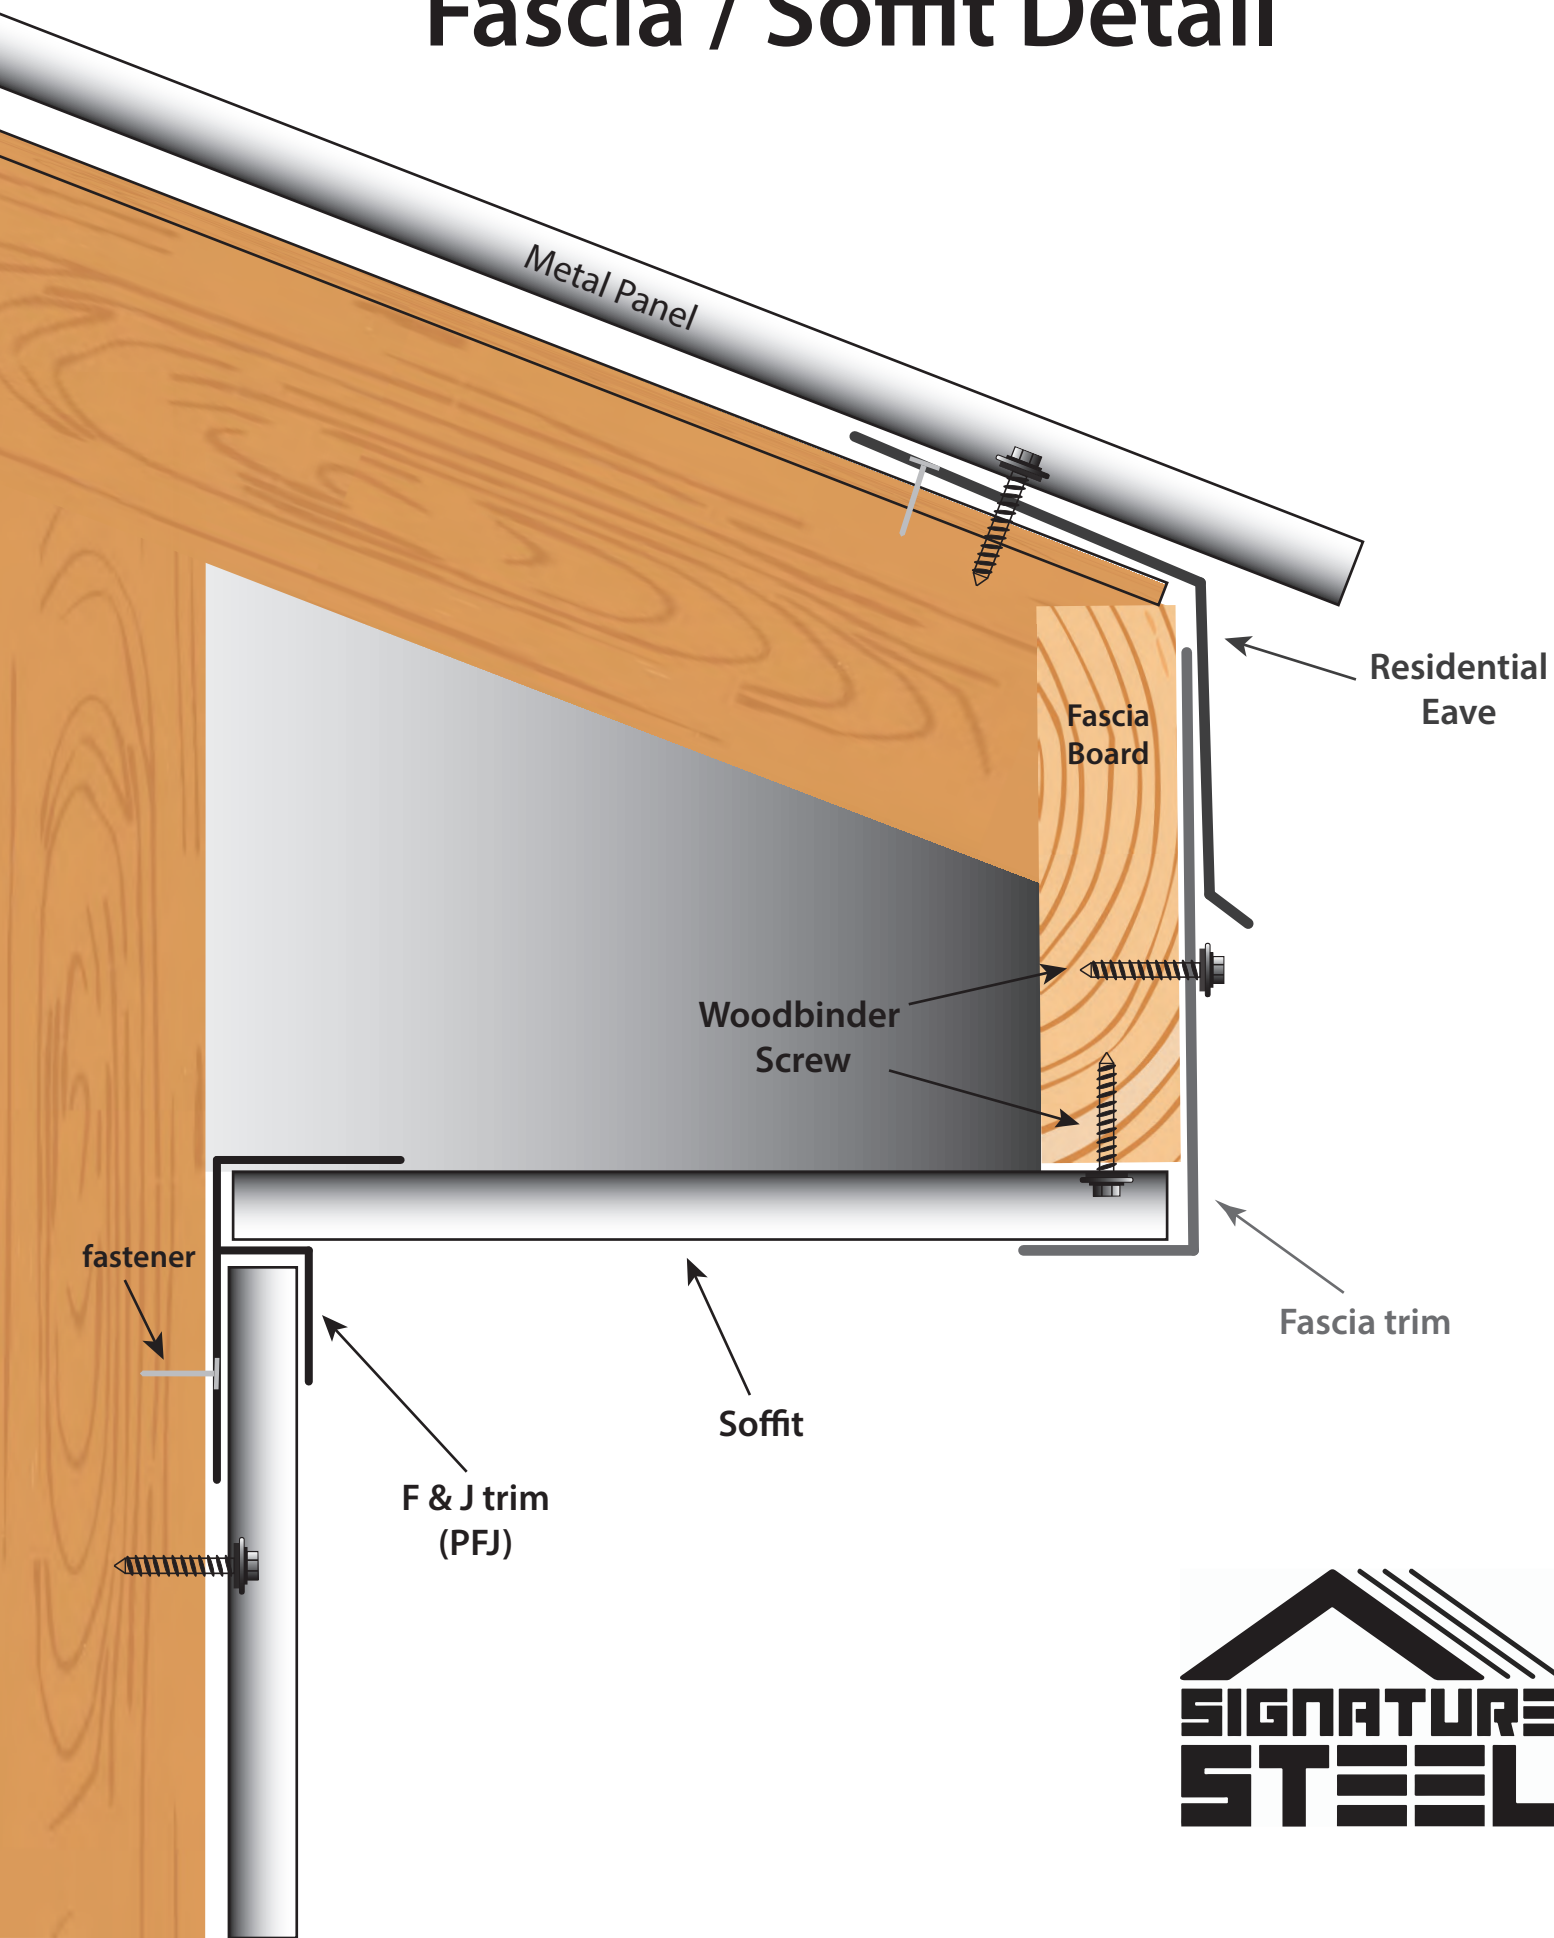


Residential Eave/ no overhang

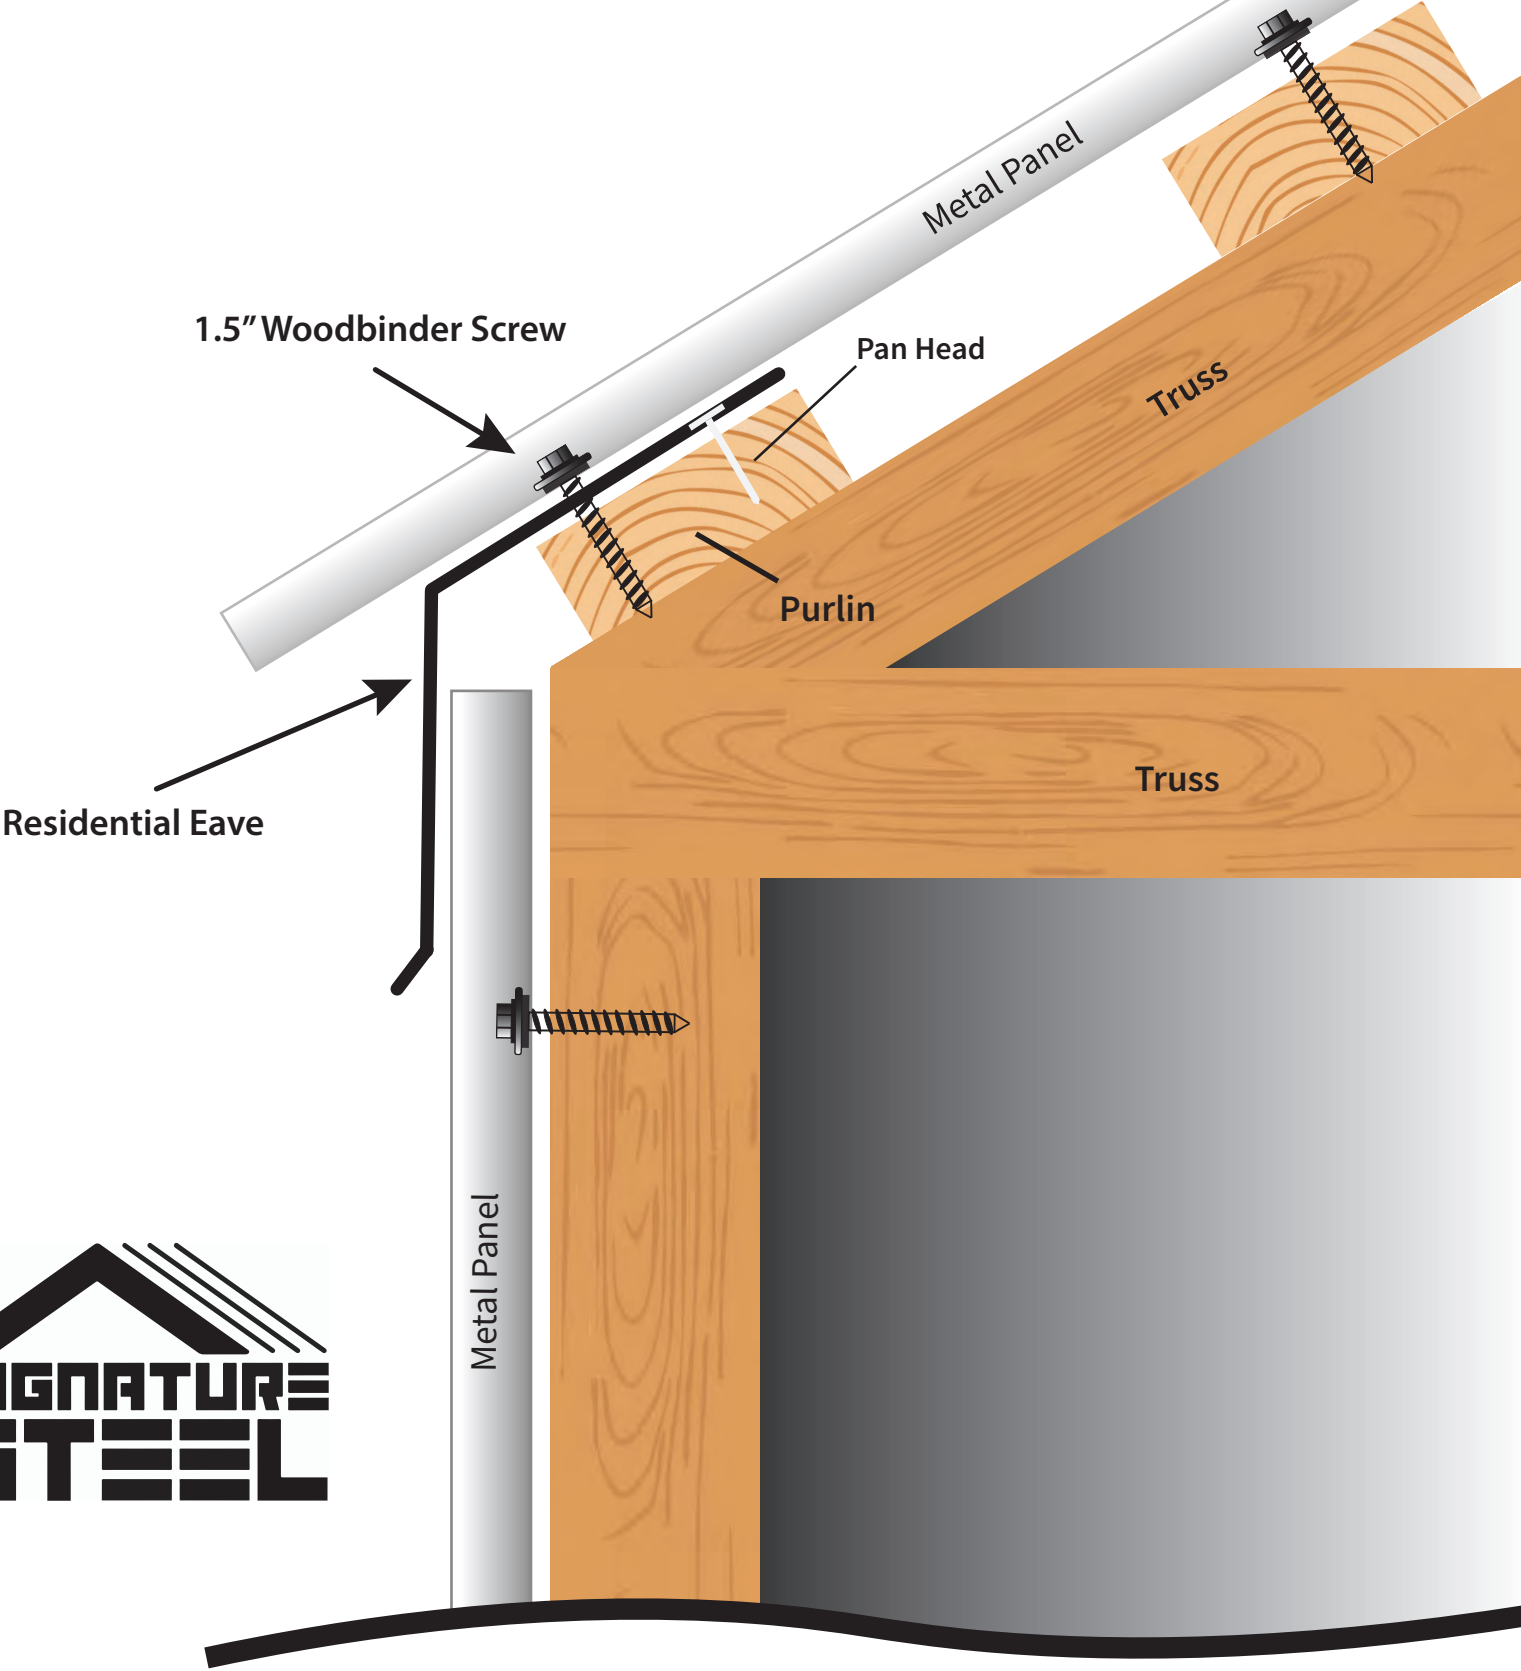


Ridge Cap Detail

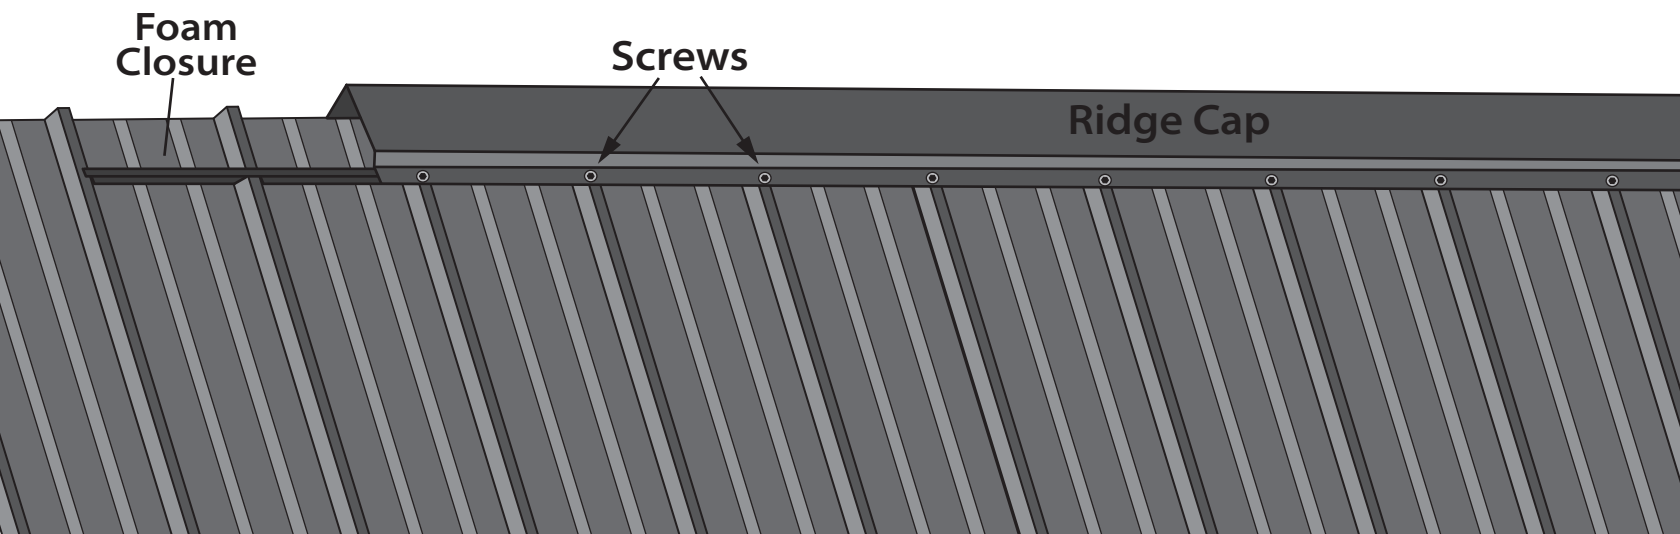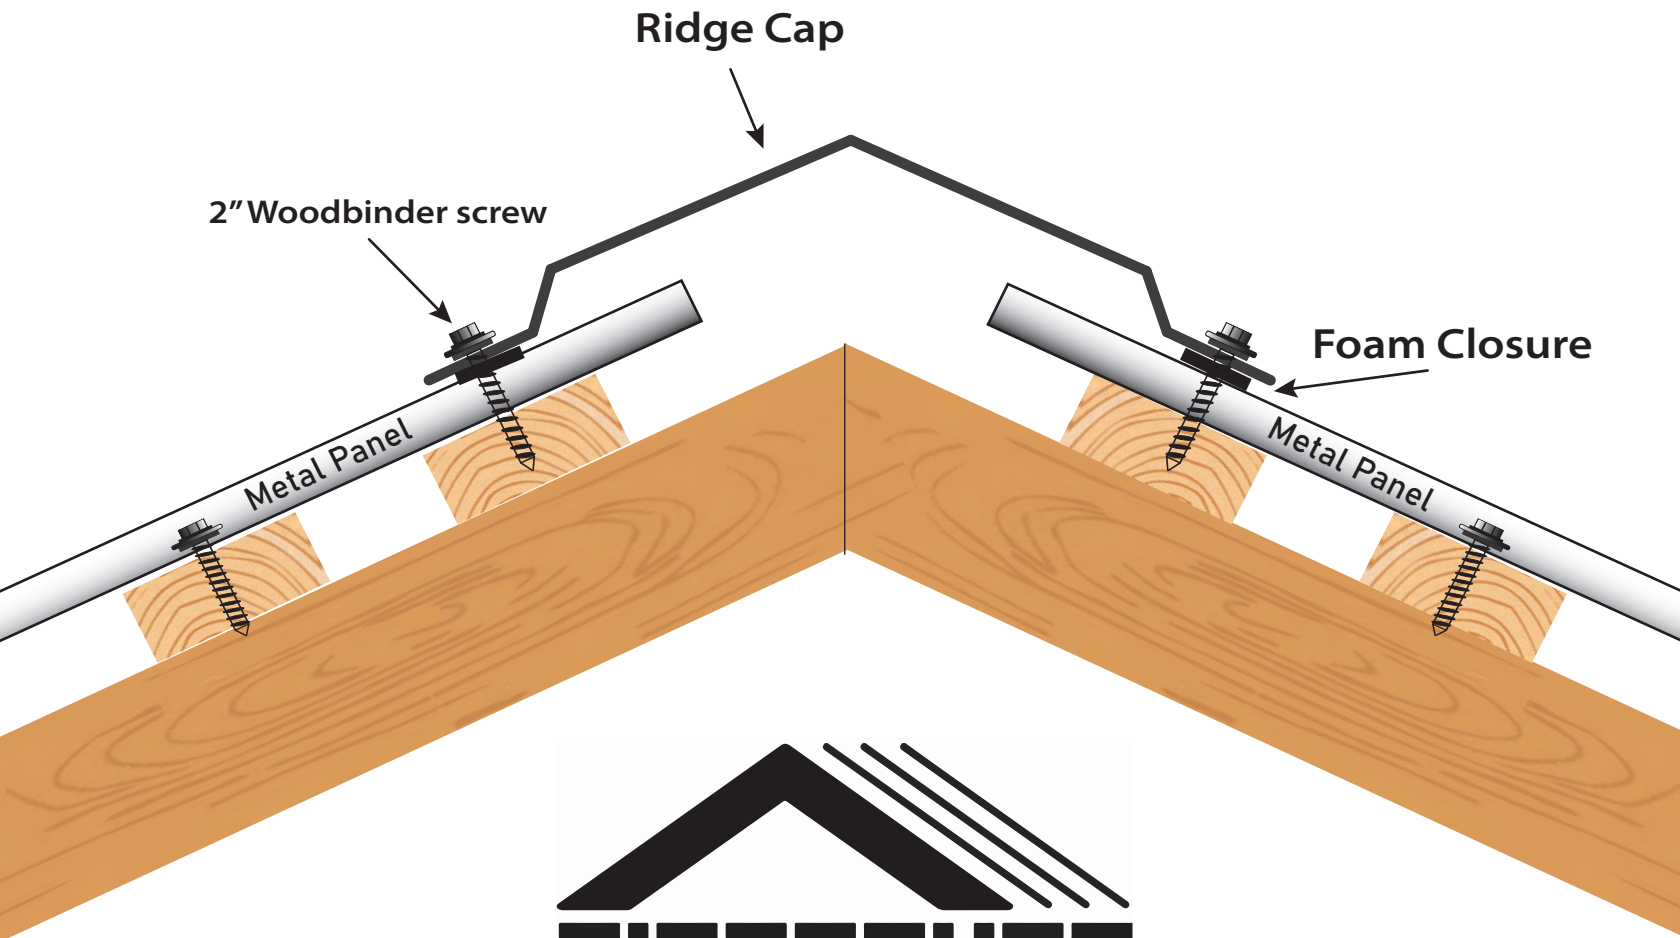


Outside Corner (Roof) Detail

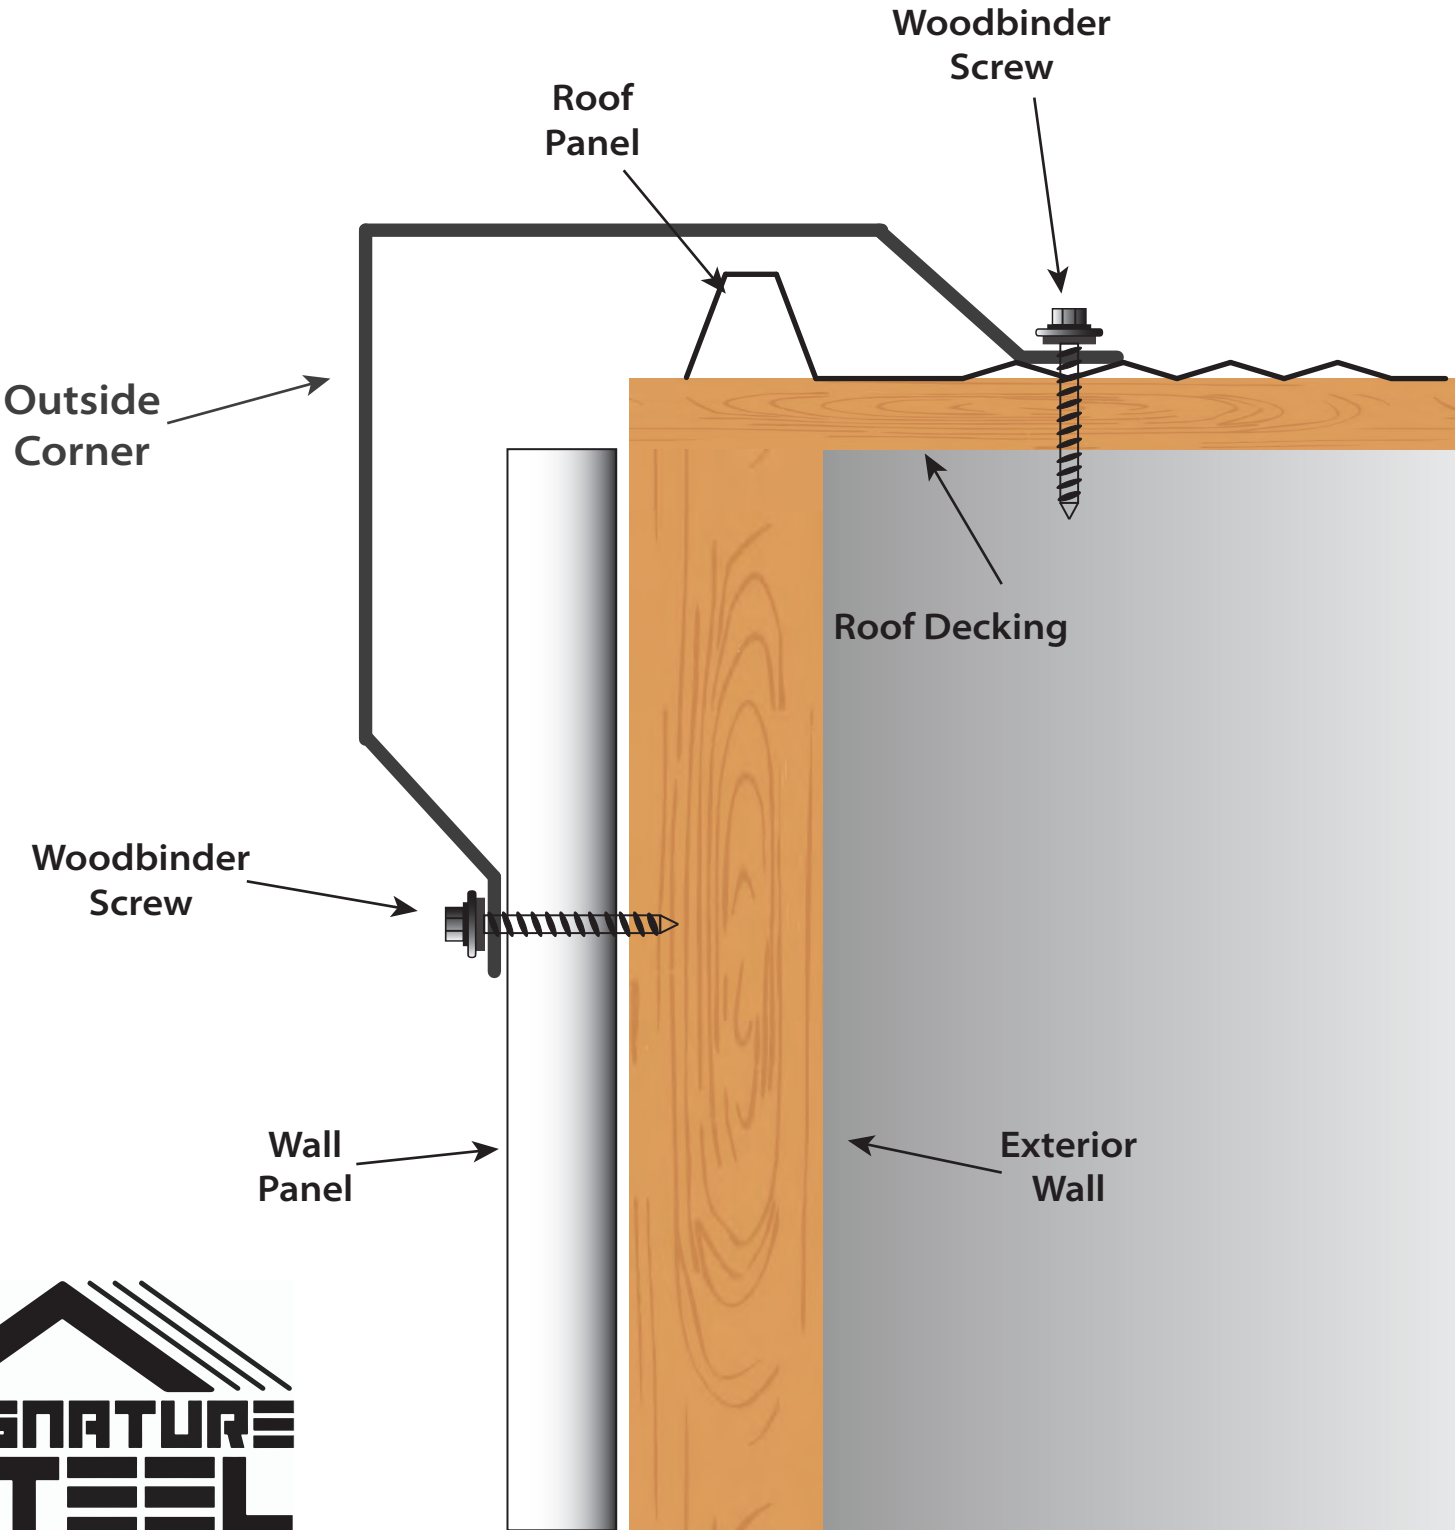


Residential Rake Detail

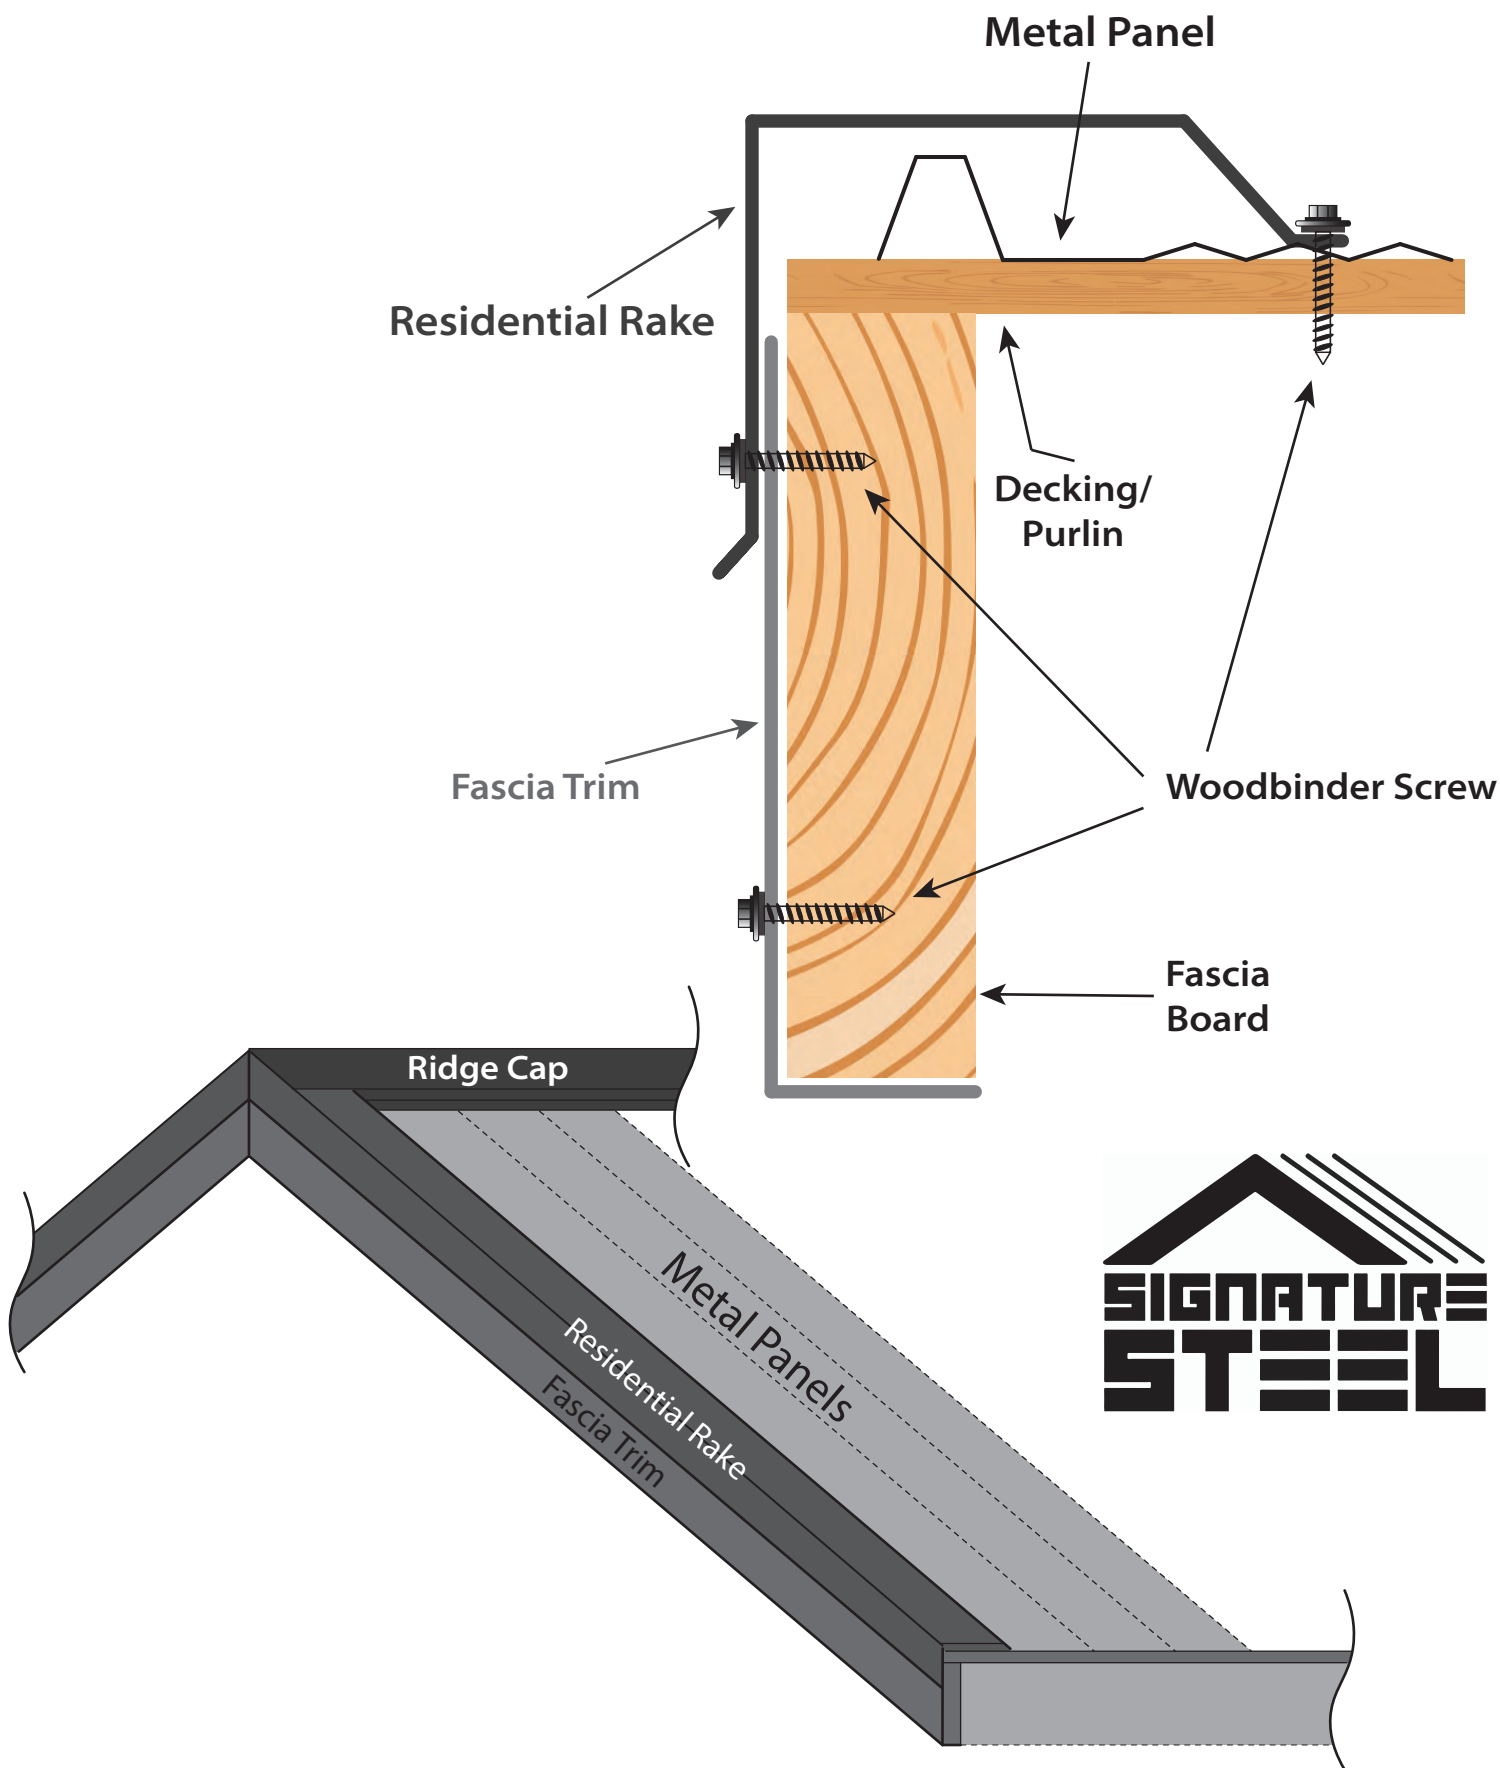


Sidewall Flashing Detail

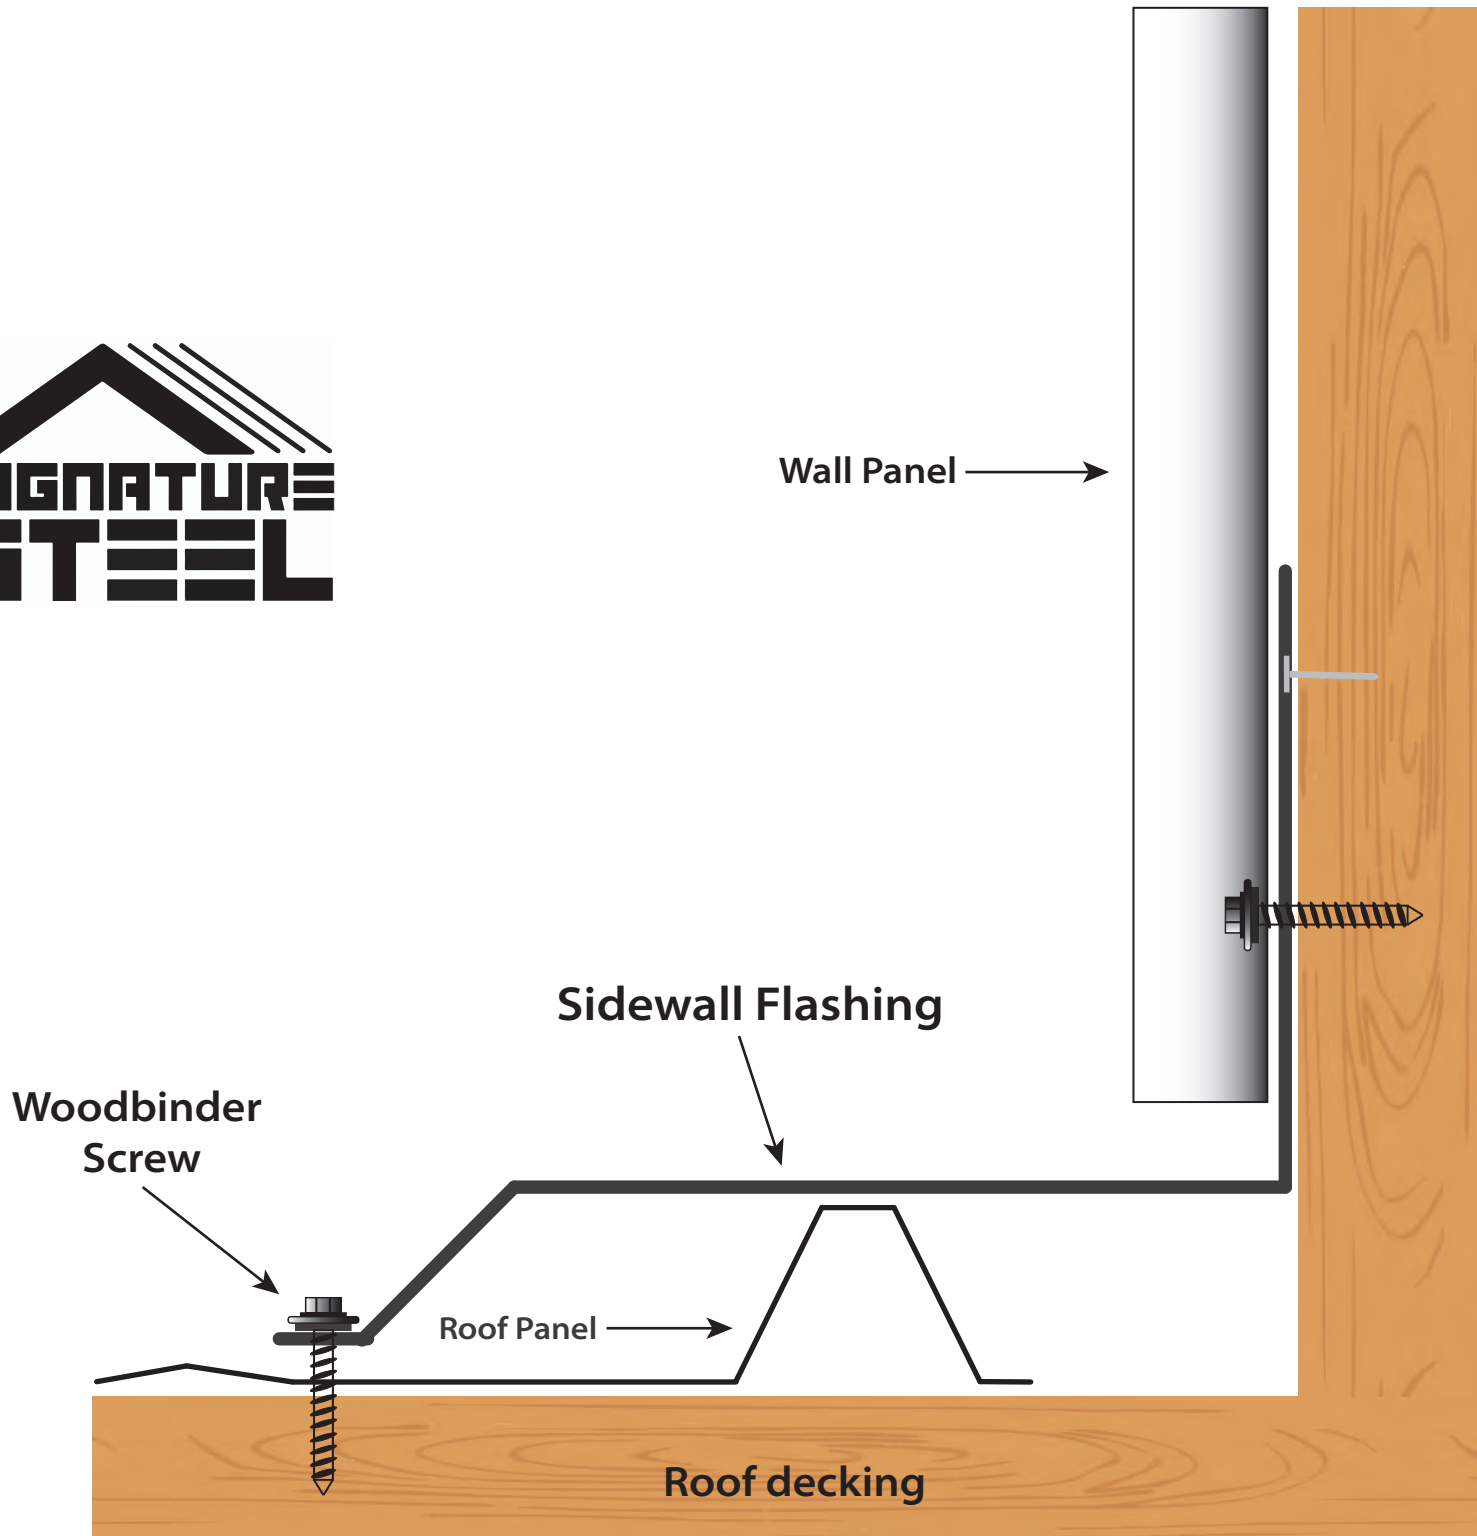


Endwall Flashing Detail

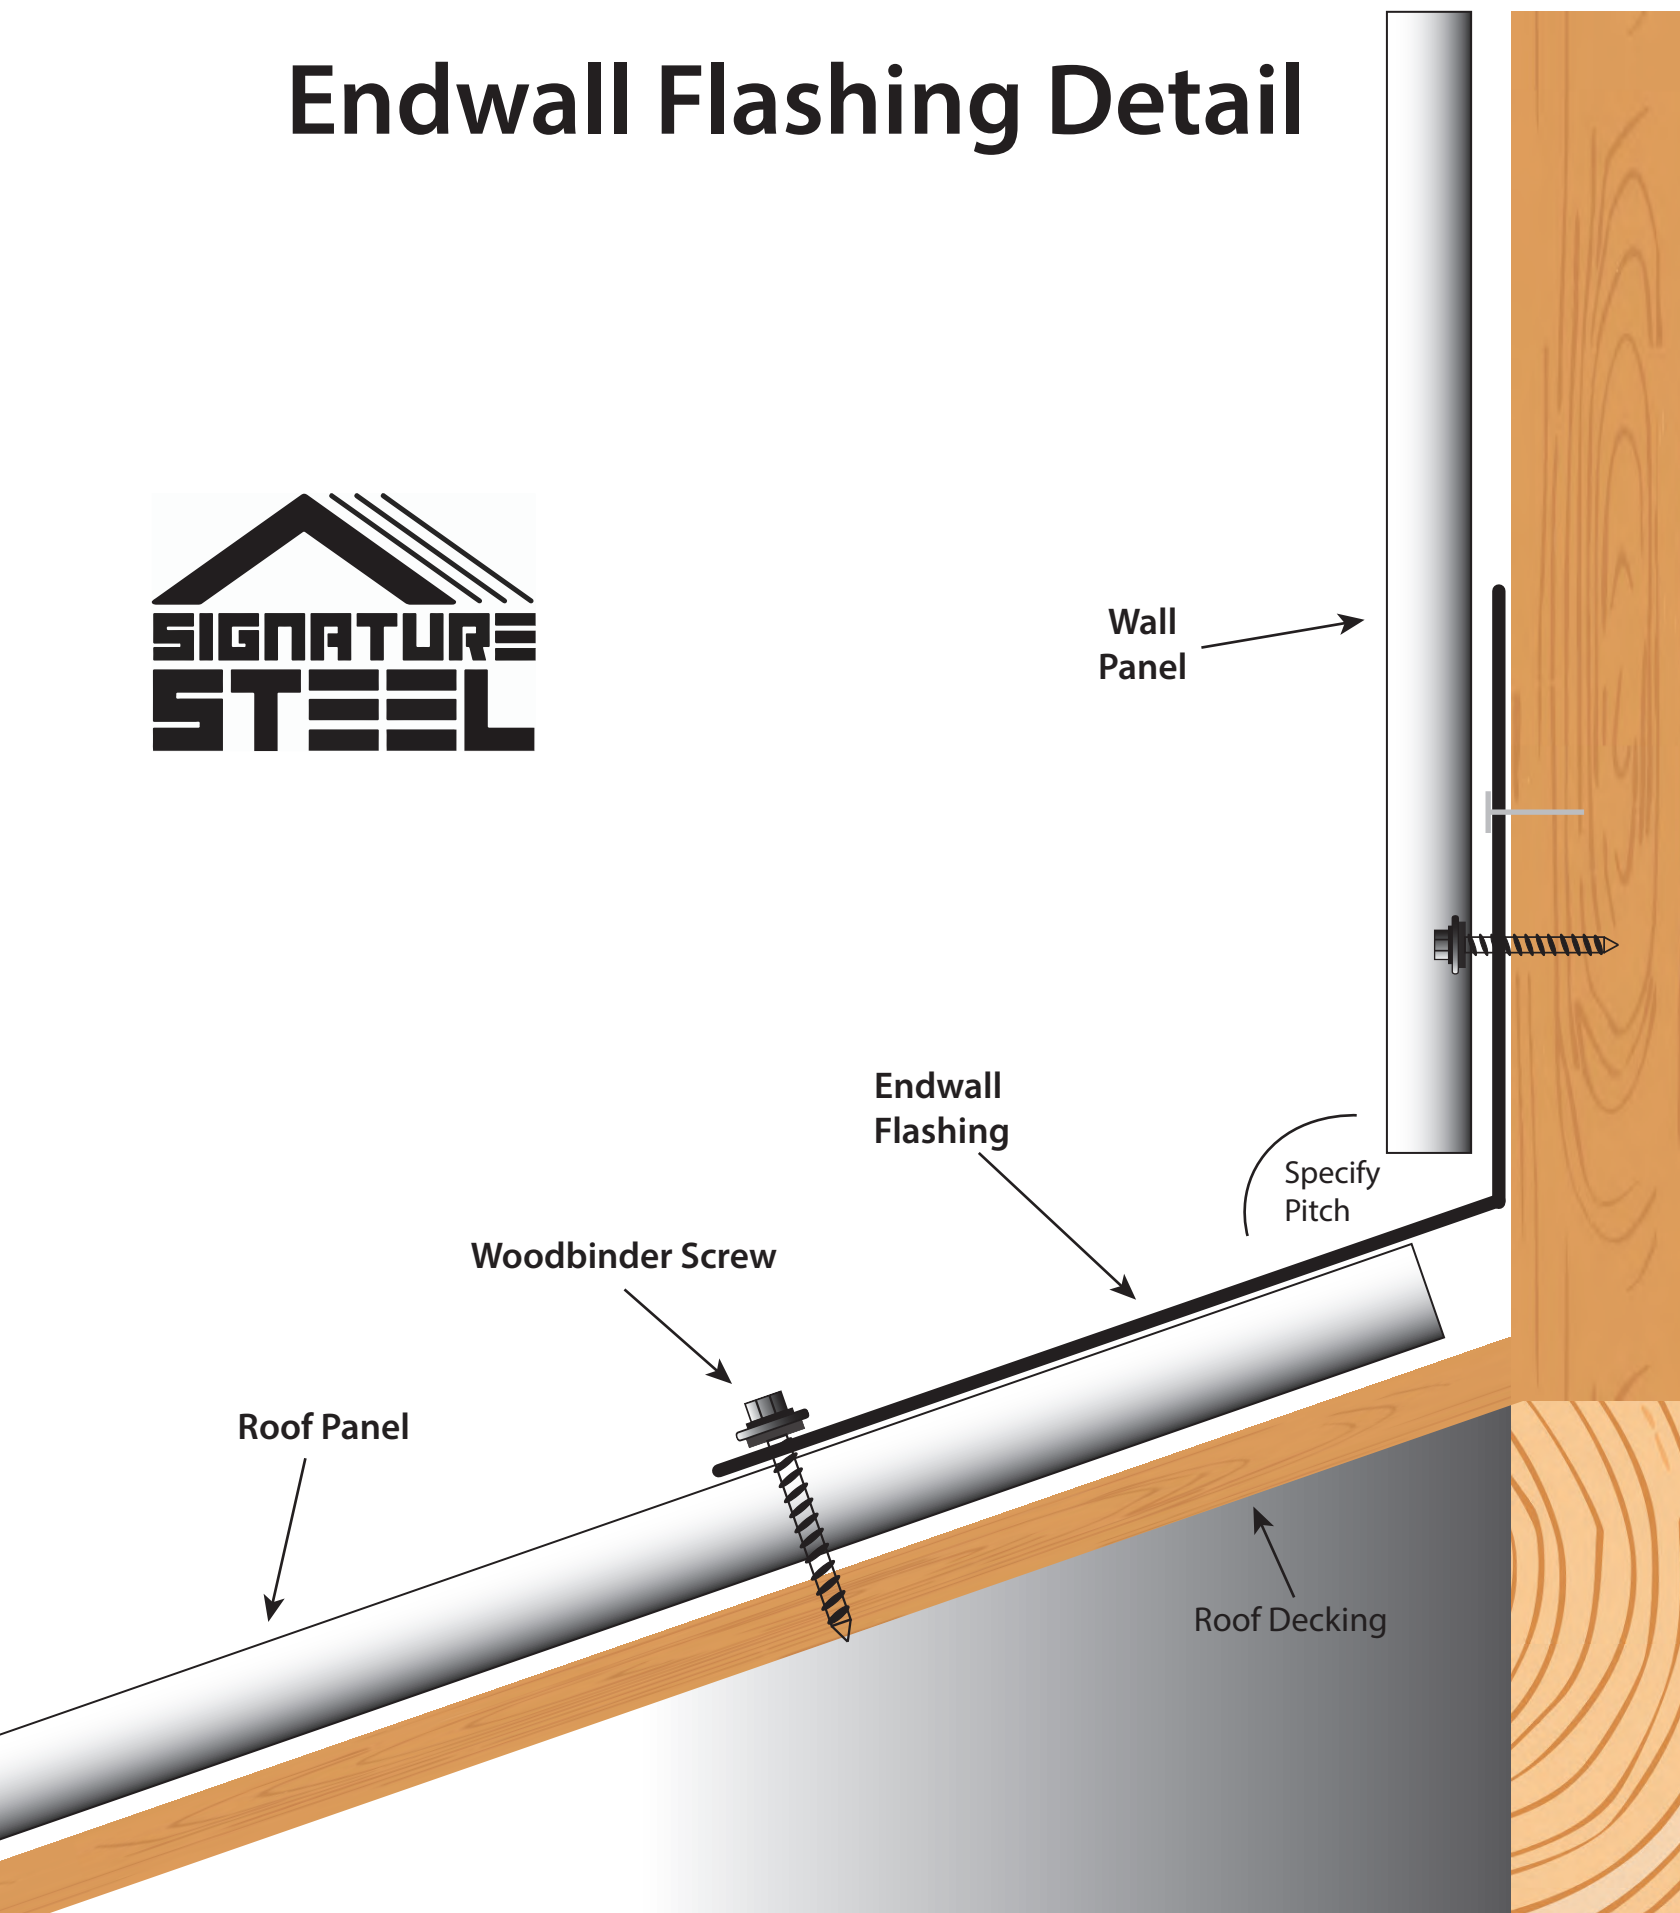



Transition Trim Detail

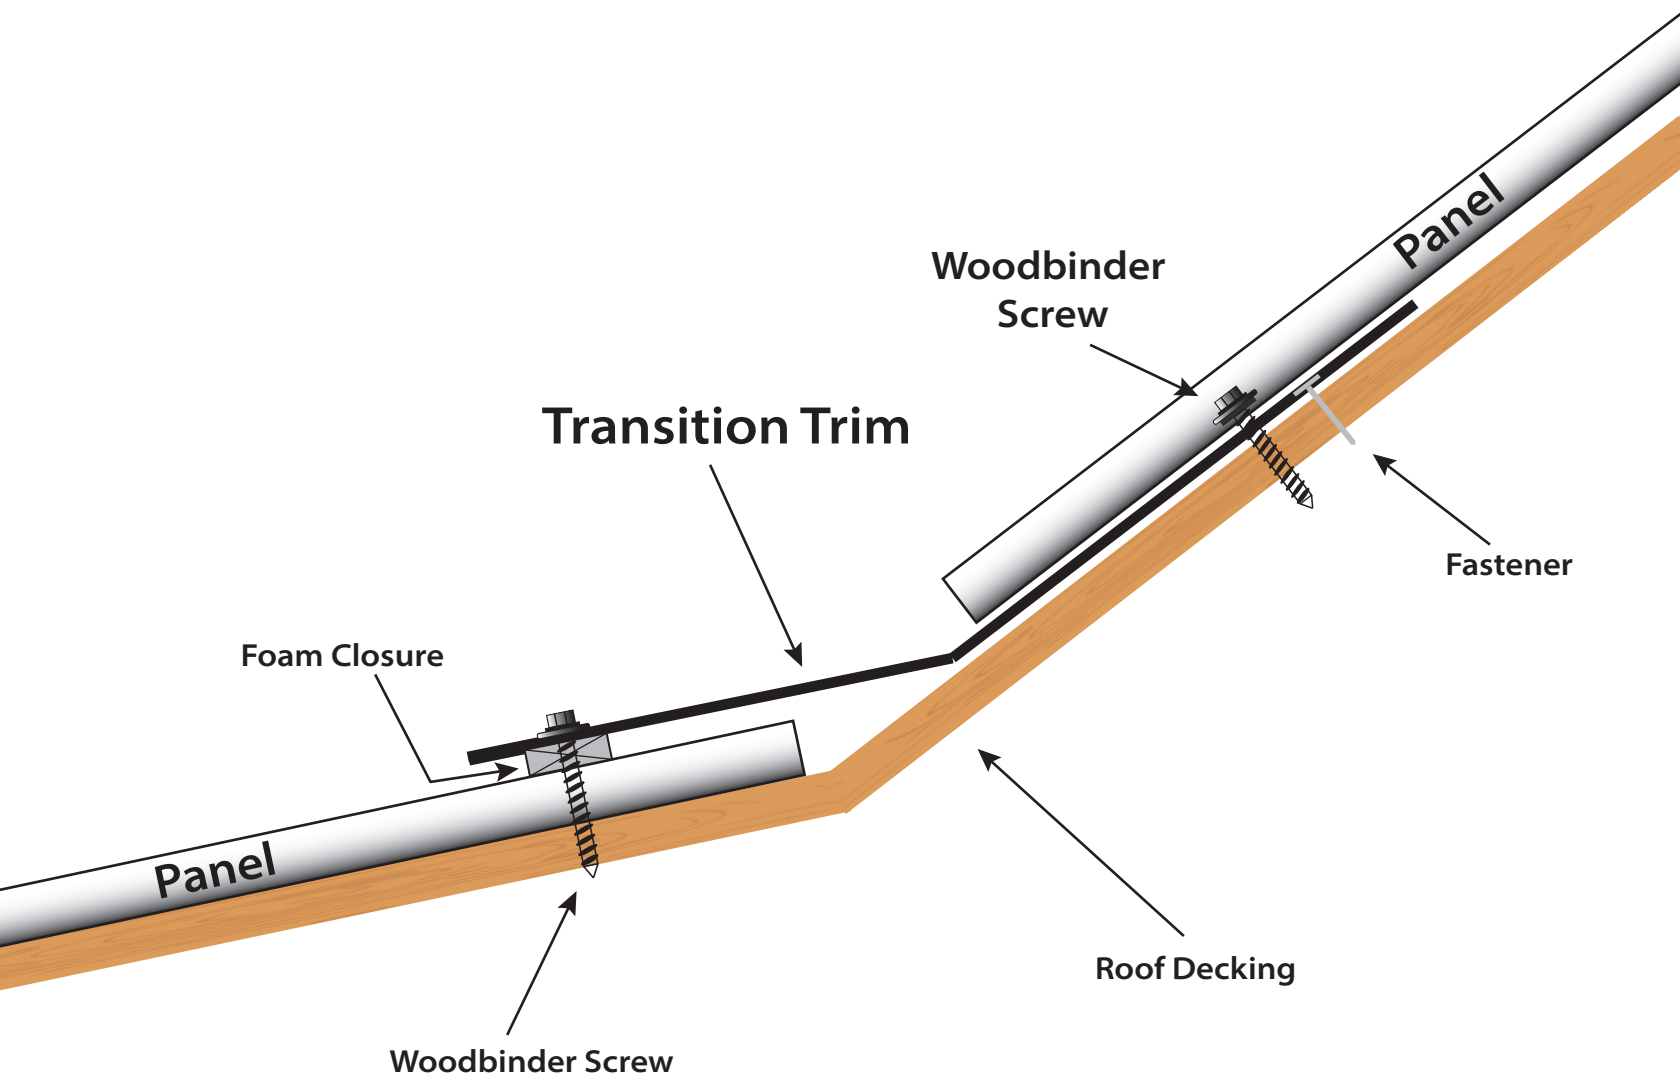

Valley Trim Detail

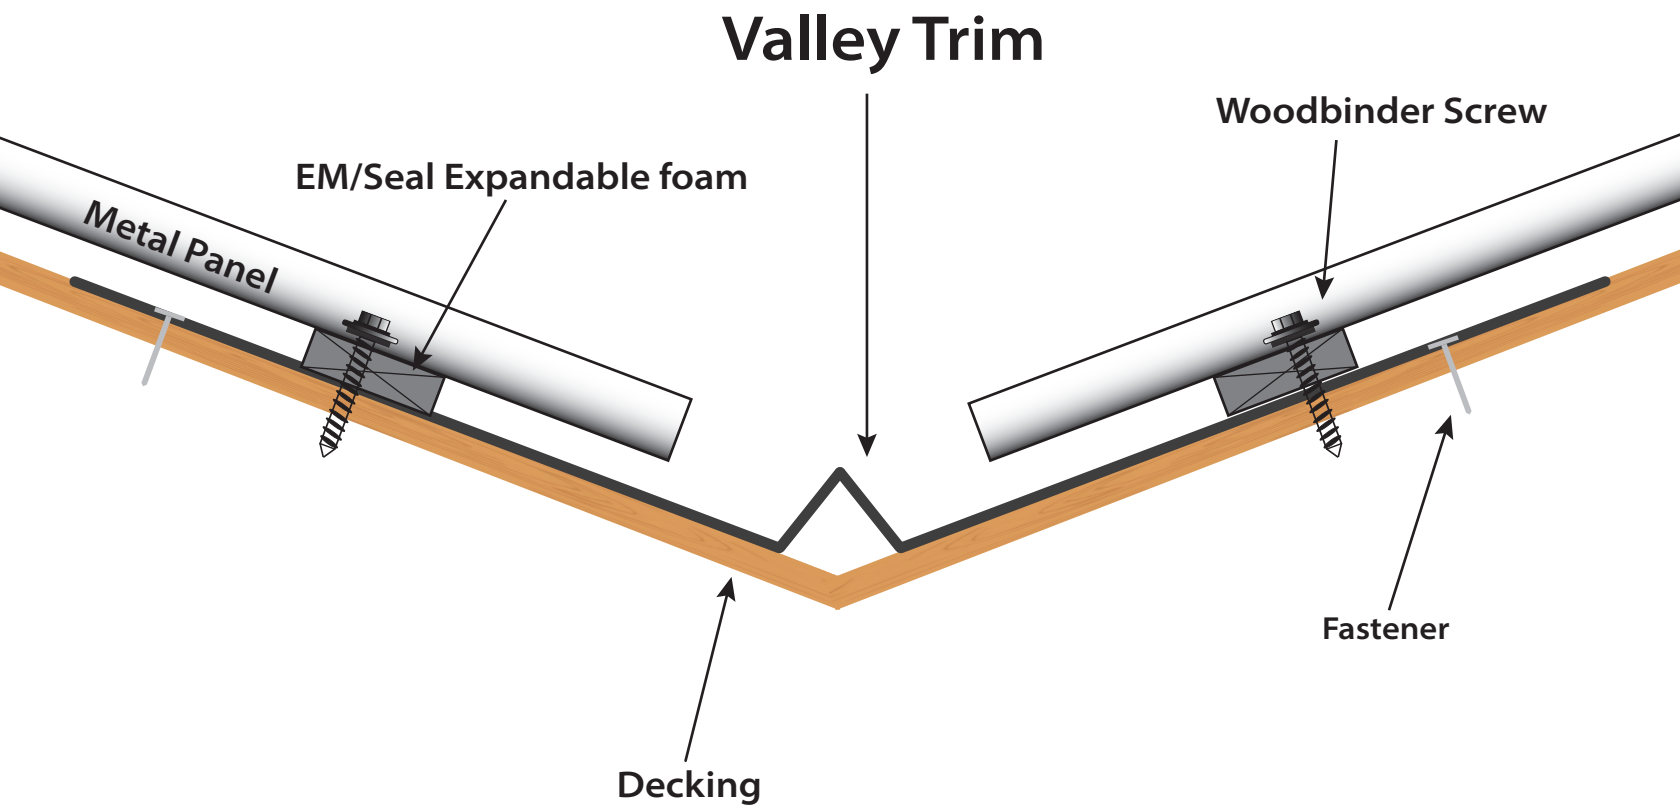


R-Panel Gutter Detail

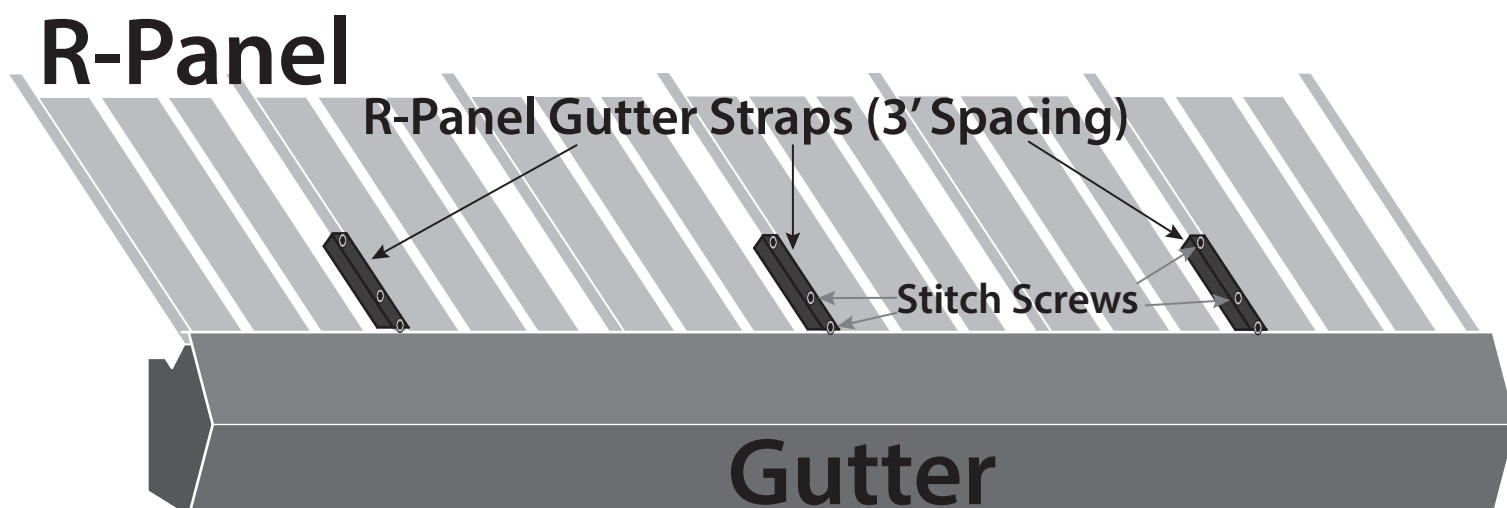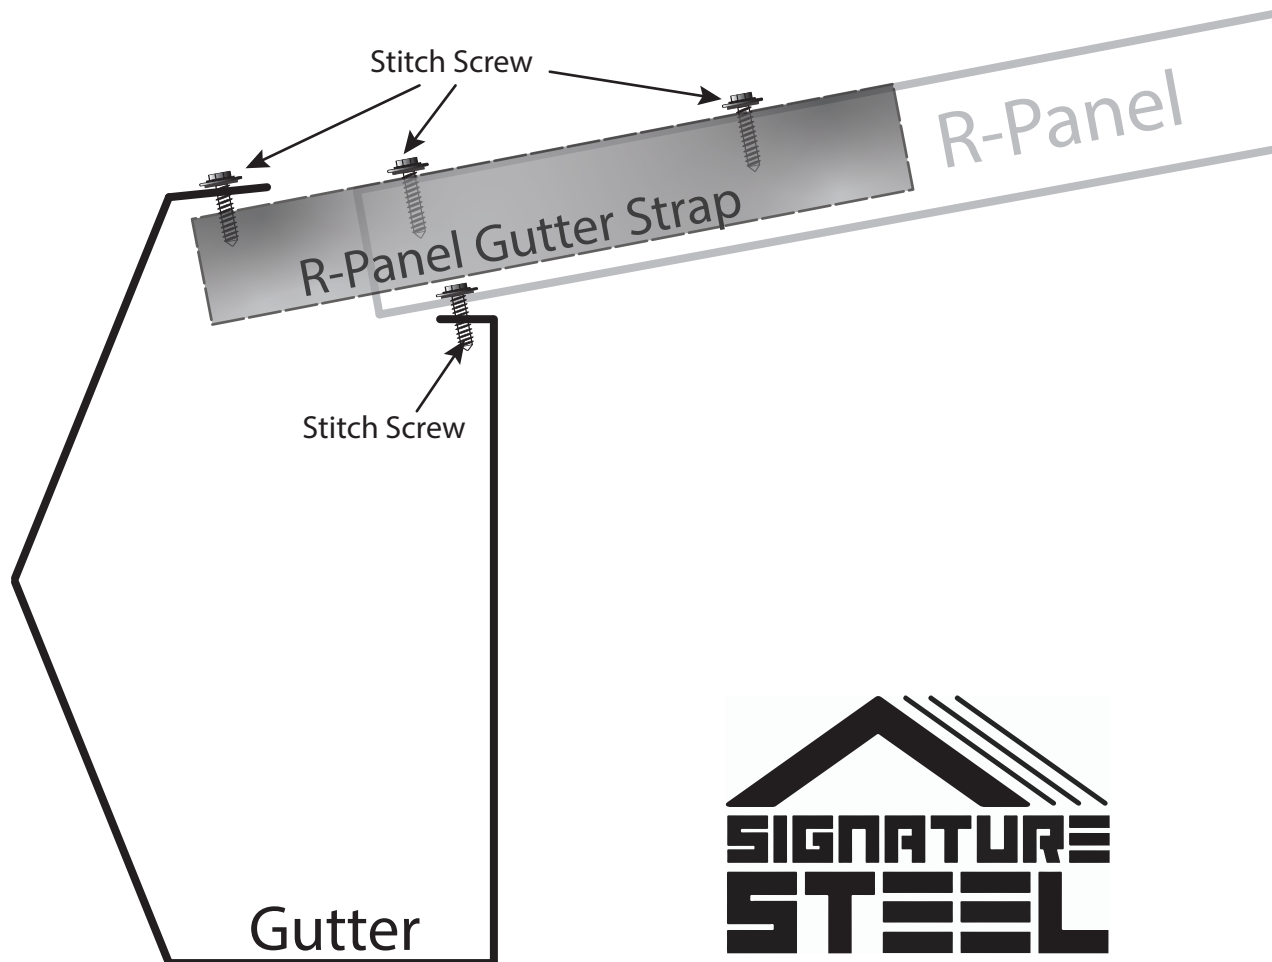





Standard Roof Trim Placement

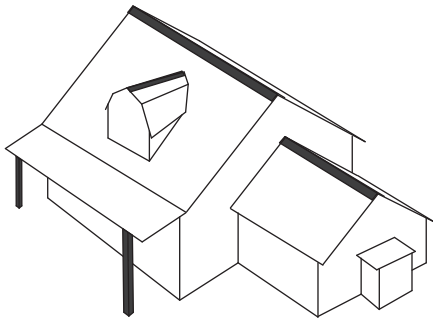


Ridge Cap

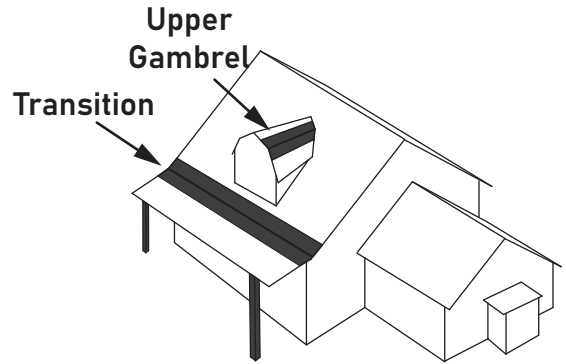


Transition (Gambrel)

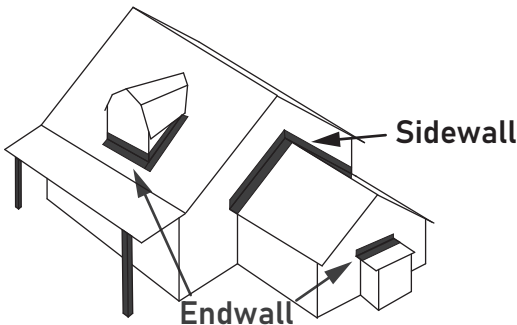


Wall Flashing

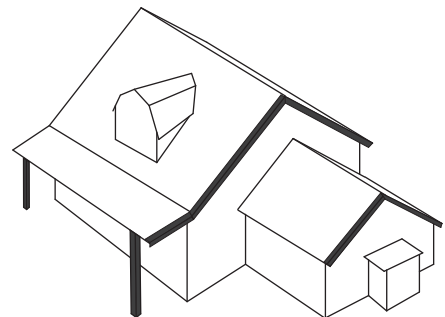


Rake Trim

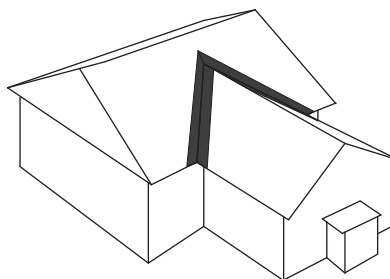

W Valley Trim

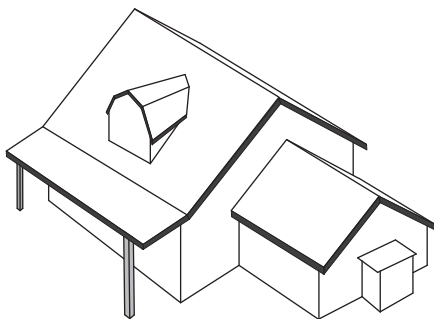


Fascia Trim

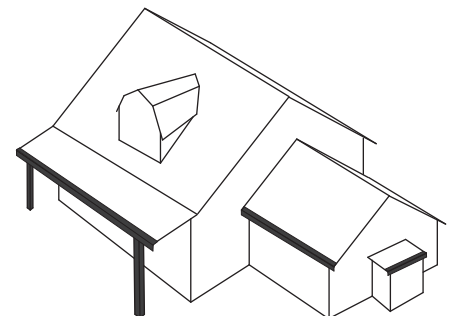


Eave Trim

Outside Corner (Wall) Detail

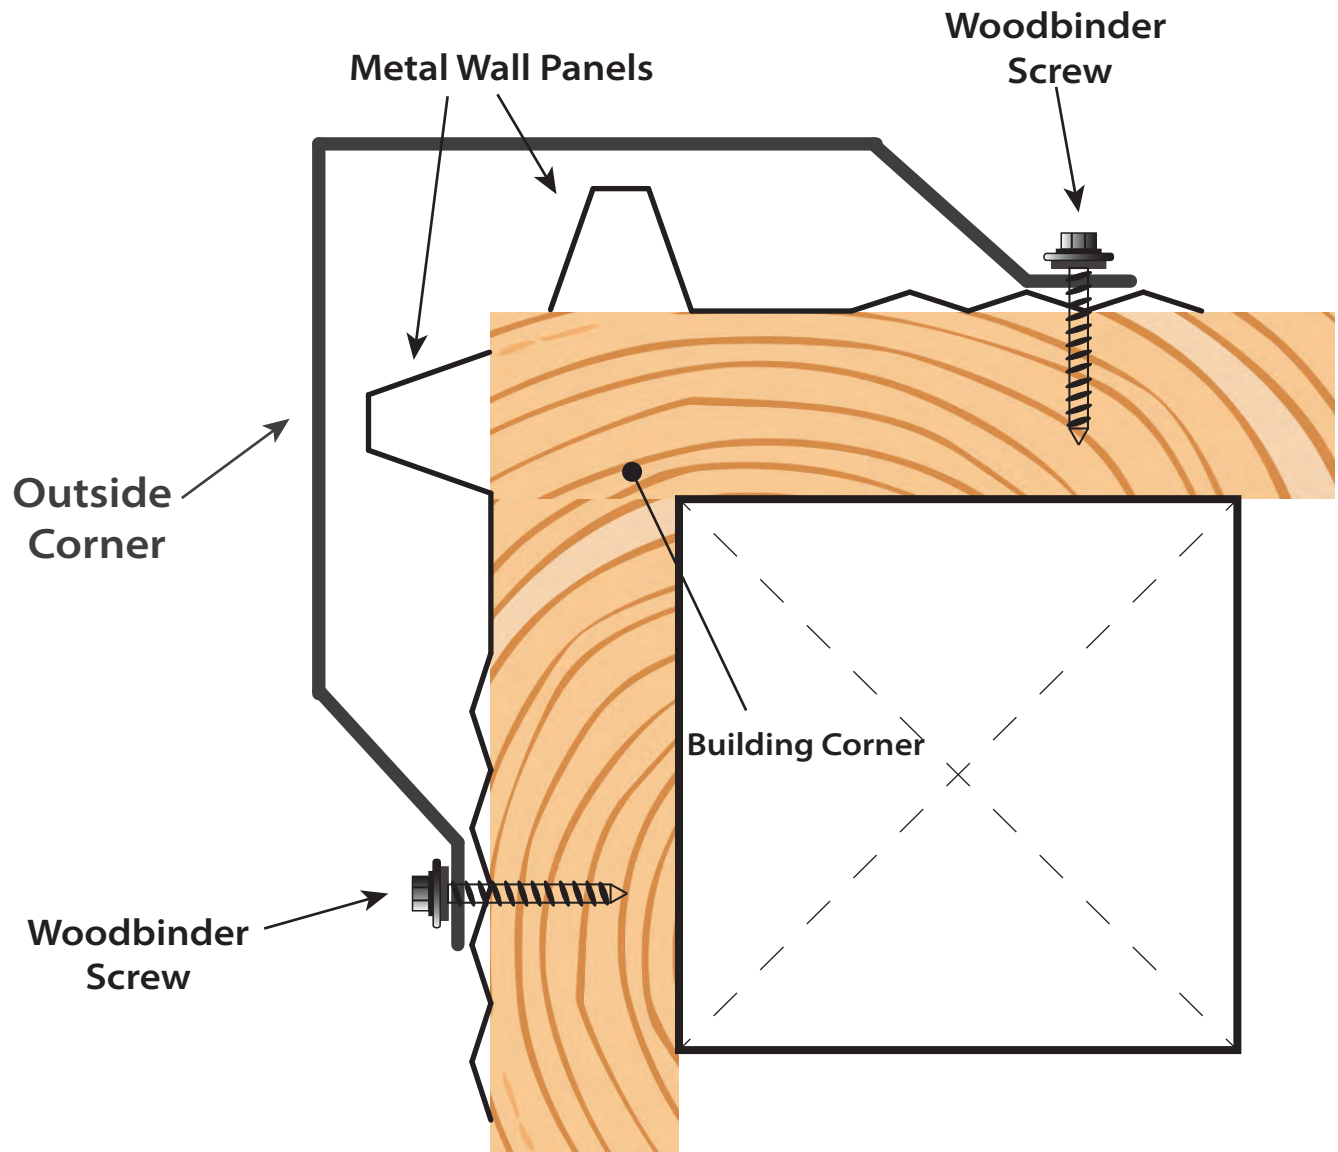

Ratguard / Wainscot Detail

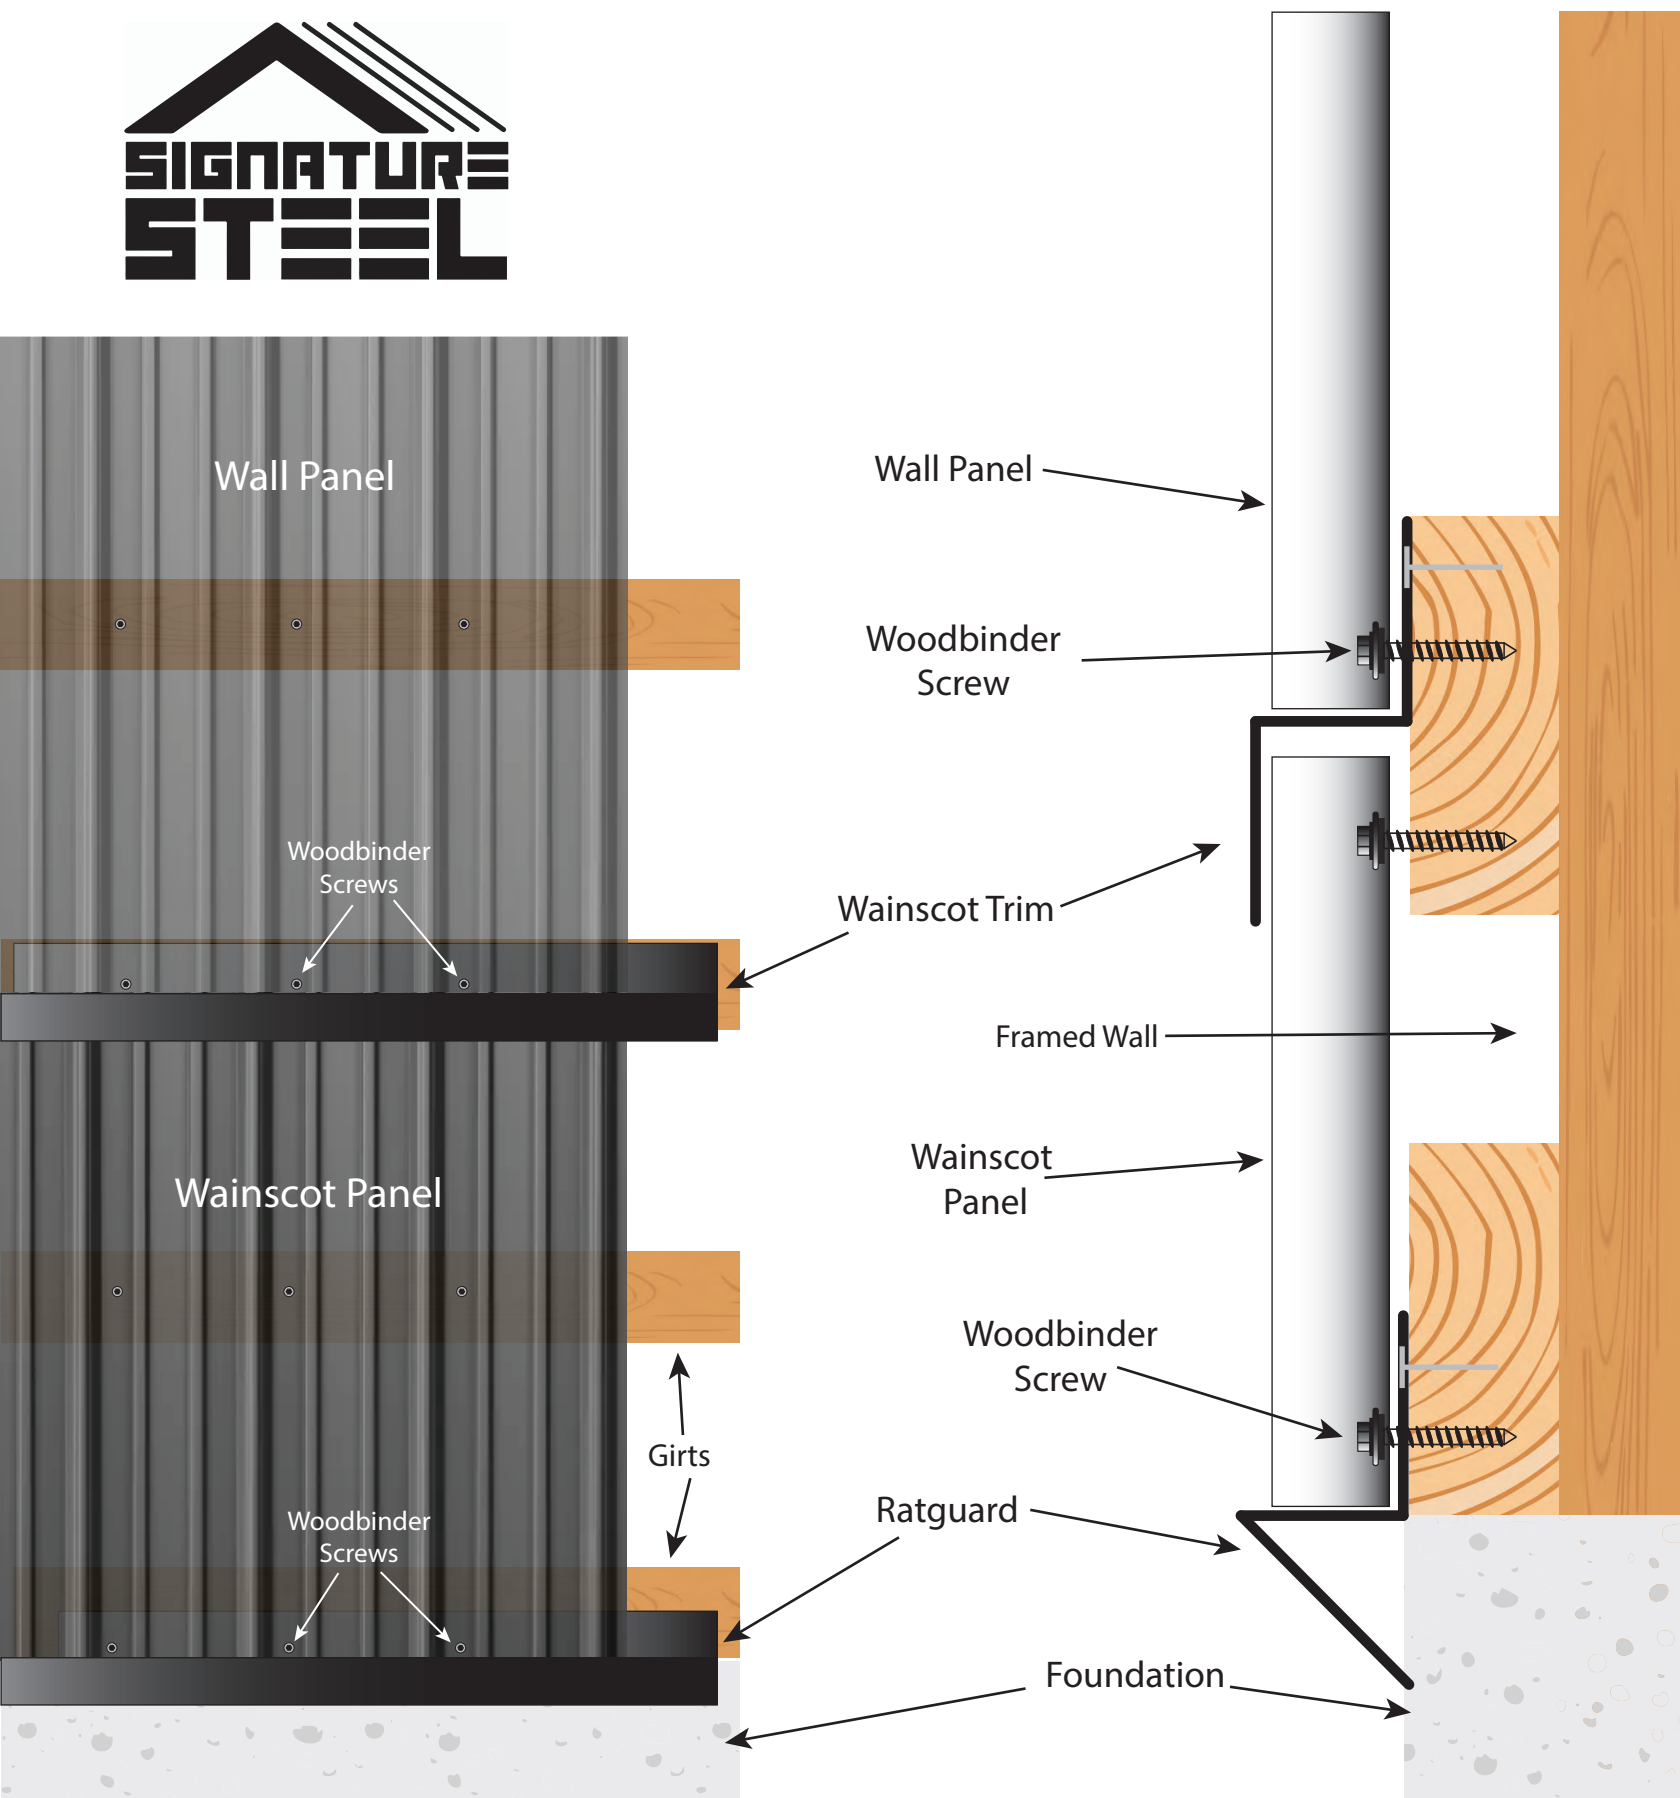

Overhead Door Detail

